


Set up or modify a message

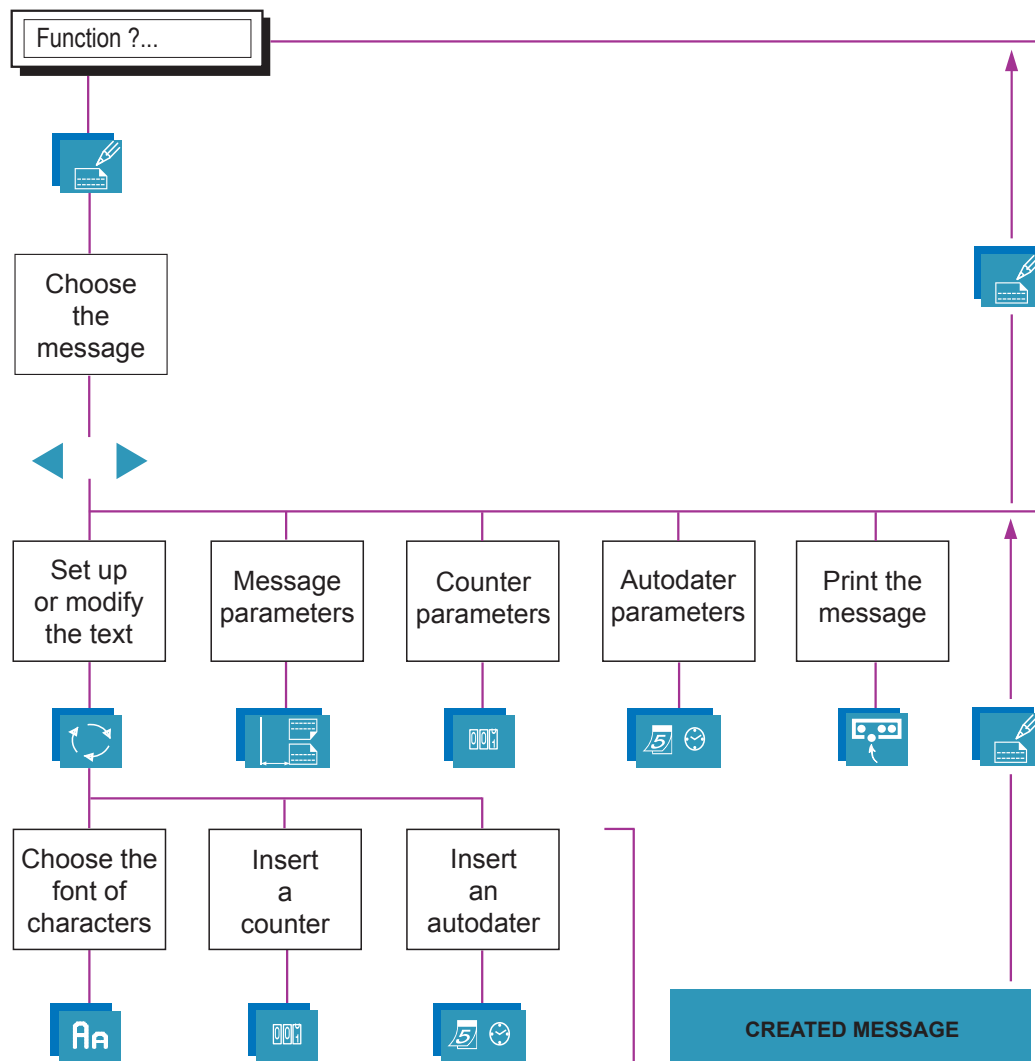

B ☐ : Bolderization
 M ☐ : Font
 C ☐ : Bar Code
 L ☐ : Logo
 → ☐ : Tabulation
 diN ☐ DIN characters



Imaje S.A.
 9, rue Gaspard Monge
 BP110
 26501 Bourg-lès-Valence Cedex
 France
 Tél. : (33) 04 75 75 56 00
 Fax : (33) 04 75 82 98 10
<http://www.imaje.com>

A DOVER TECHNOLOGIES COMPANY

Direct access keys to the main functions



On/Off



Autodater



Counter



Faults/remedies



Message



Font of the characters



Message parameters



Servicing/
Maintenance



RS232 link/
Dialogue language



Keyboard code
Security code



Library size/
Message duplication

SB CLASSIC



Status jet



Check the consumables (ink, additive)



Cleaning the head, jet stopped

